BURNER FOR LABORATORY

APT.L®

INSTRUCTIONS FOR USE

phoenix-dent CO., LTD.

COSMO BIO CO., LTD.

【JAPAN】
TOYO EKIMAE BLDG. 2-20, TOYO 2-CHOME,
KOTO-KU. TOKYO 135-0016, JAPAN
Phone: +81-3-5632-9610
FAX: +81-3-5632-9619
URL: https://www.cosmobio.co.jp/

COSMO BIO USA

【Outside Japan】
2792 Loker Ave West, Suite 101
Carlsbad, CA 92010, USA
e-mail: support@cosmobiousa.com
Phone/FAX: (+1) 760-431-4600
URL: www.cosmobiousa.com

THANK YOU FOR YOUR PURCHASE OF THE APT L.

Please read these instructions carefully before use of the APT L for proper use.
Keep this instruction manual on hand to refer to if necessary.

BATTERY INSTALLATION

Slide the cover with "OPEN" on the bottom of the APT L in the direction of the arrow, and install a battery.

Note: Replace the battery if spark becomes weak. Use the SUM-3, 1.5V battery, and be sure to install it properly, taking care to align the positive and negative terminals.

LPG CONTAINER INSTALLATION

① Slide the safety lock switch to the "S' LOCK" position (Green color can be seen.)

② Install the LPG container and rotate it until its slit is up and aligned with the red mark ▲ on the panel of the APT L. Then push the container until it clicks attracted to the magnet on the APT L.

OPERATION

① Slide the safety lock switch to the "RELEASE" position (Red color can be seen.)

② Push the button fot ignition. Release the button to extinguish the flame.

③ While pushing the button, turn it clockwise for continuous combustion. This will keep the flame burning even if you release the button.

AFTER USE

① Remove the LPG container from the APT L and rotate it until its slit of LPG container is not aligned with the red mark ▲ on the APL L.

② Push the center of the "outlet connector" of the APL L with the releaser, and keep pushing it until "hissing" sound stops in order to release the LP gas remaining in the APT L.

③ Slide the safety lock switch to the "S' LOCK" position (Green color can be seen.)

DESIGNATION OF PARTS

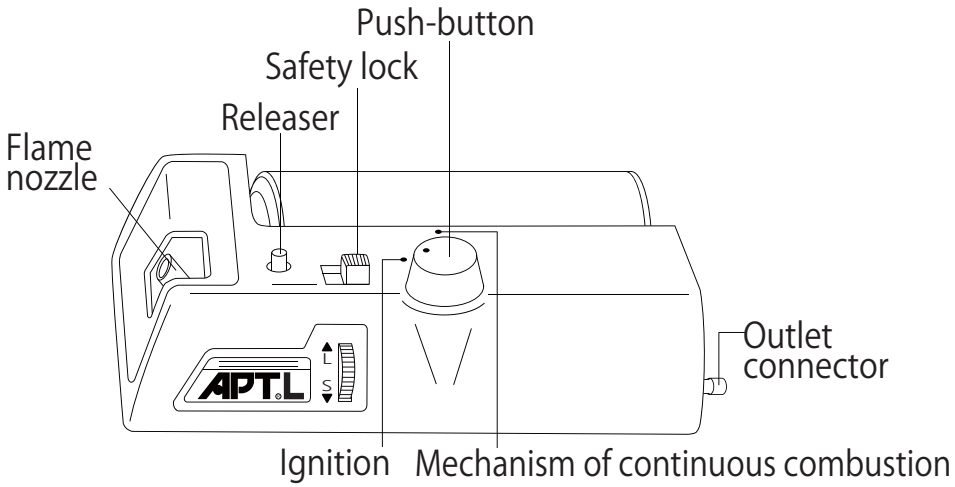

CAUTIONS

① If you have gas smell, stop the use of the APT L and remove the container. Make sure of the following points for safety use:
(1) the nozzle is not clogged.
(2) the LPG container is properly installed.
(3) the battery does not become weak.
(4) sparking is normal.
Following the operation instructions, use the APT L again after these problems are solved.

② Do not use the APT L in an inclining position.

③ After use, strictly follow the instructions of "AFTER USE".

④ When transporting the APT L, remove the container from the AOT L, rotate it and then remove the battery from the APT L.

Note: The vaporized gas normally goes to the APT L from the LPG container, but when moving the APT L, the liquefied gas in the container may go into the APT L and cause troubles. So, the LPG container should be removed when transporting the APT L.